

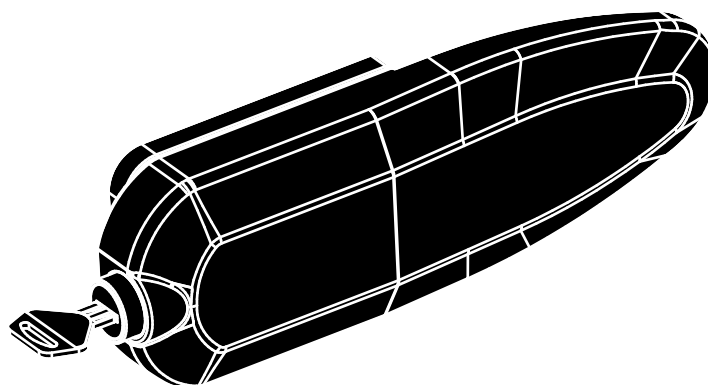
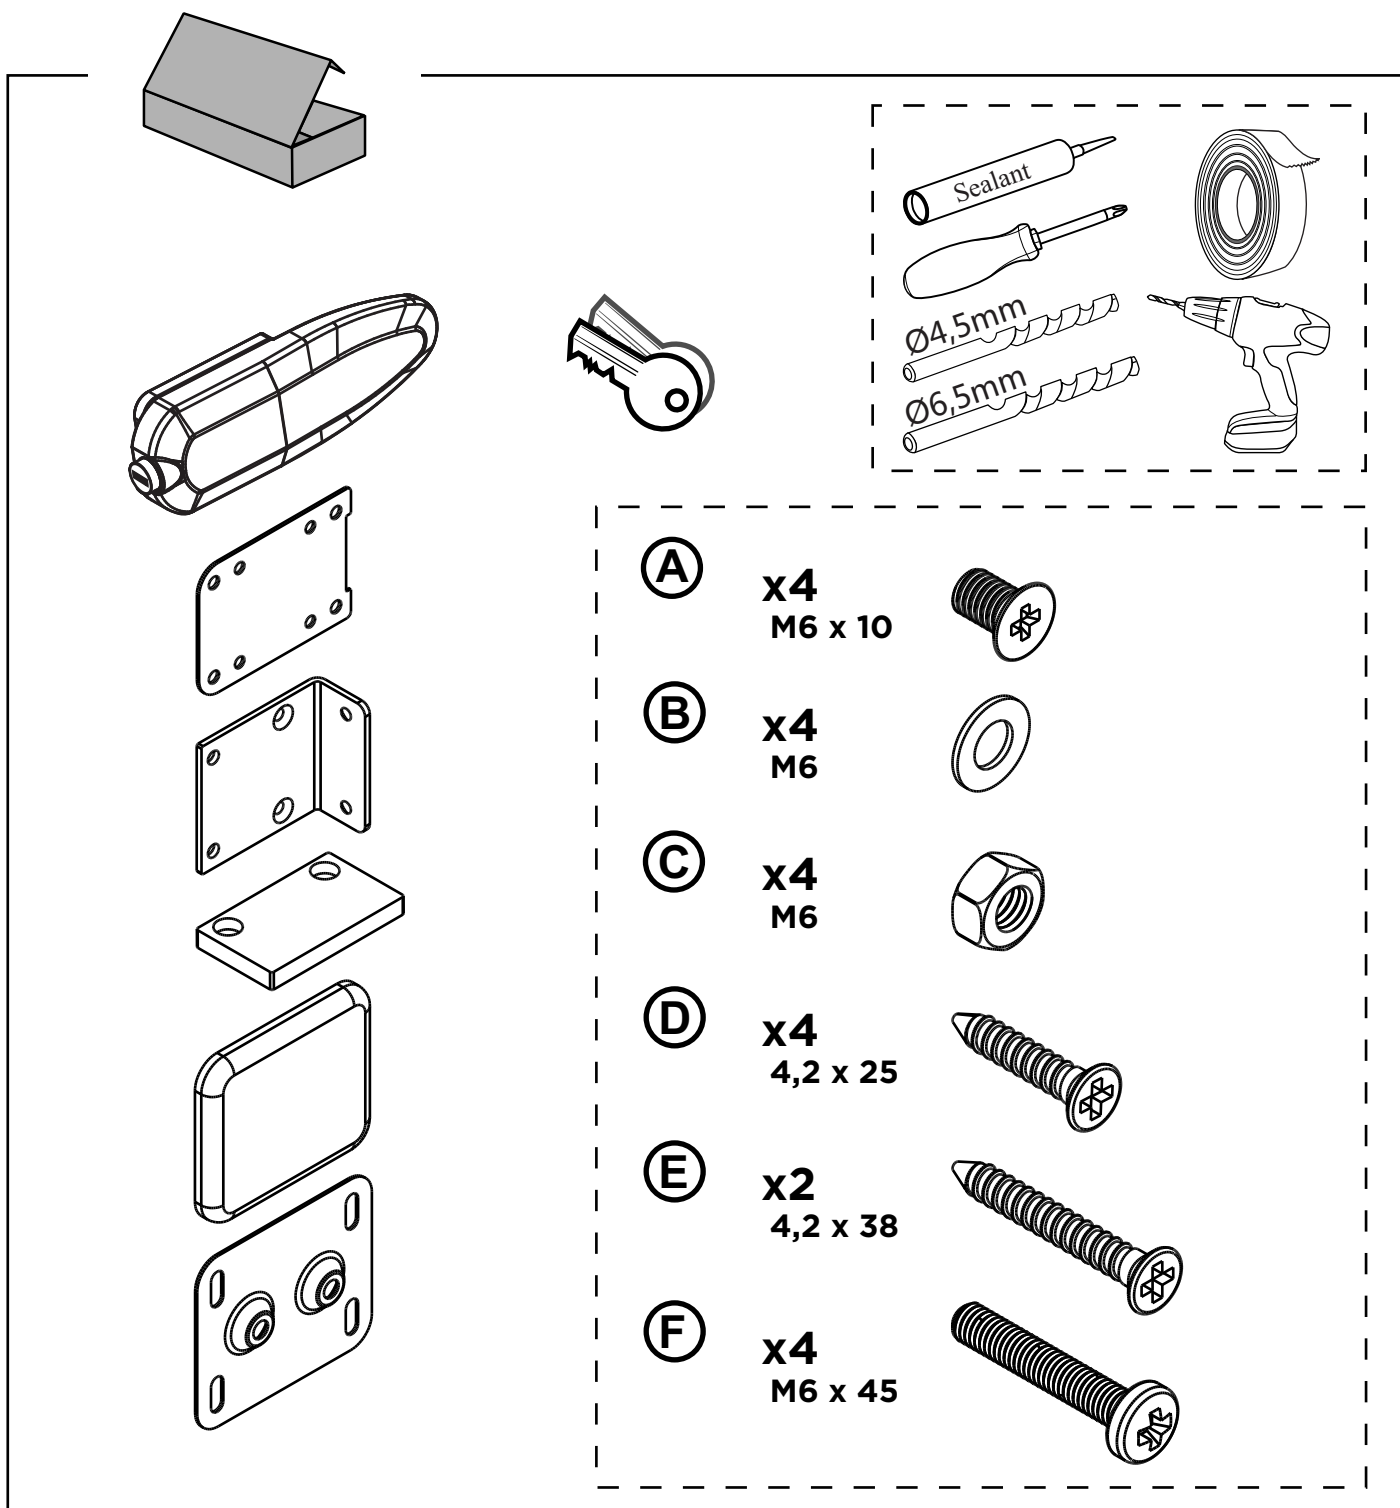


Thule Universal lock

# ➤ Instructions

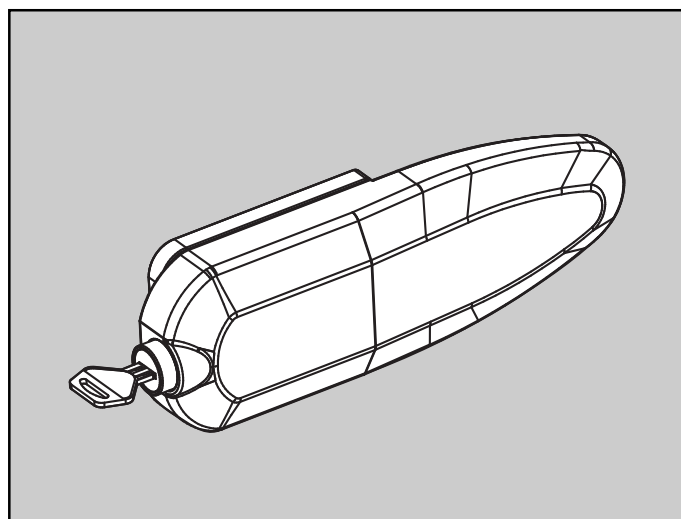


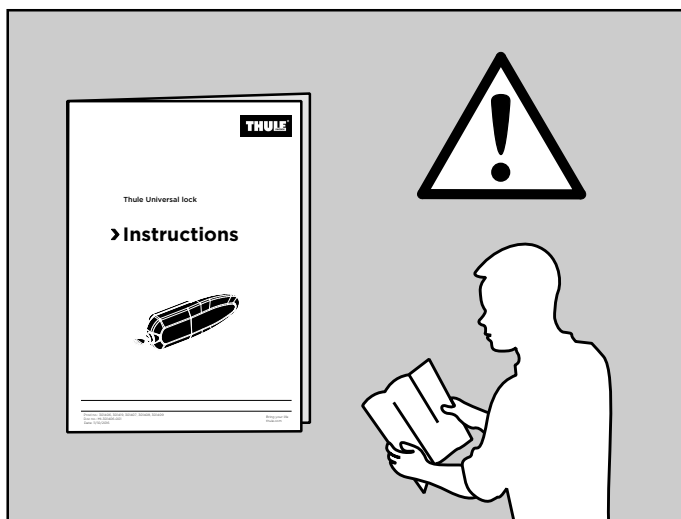


# Thule Universal lock

“One Lock fits all”, 3 different mounting options with the same lock !

## 1 Mounting options

①


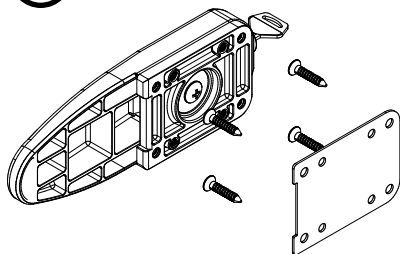


### Surface mounted installation

For sliding door, cabin doors or double rear doors of a Van.



②


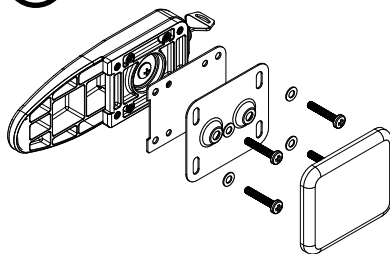


### Wall mounted installation

For Motorhome or Caravan entrance door, garage door or hatches.



③

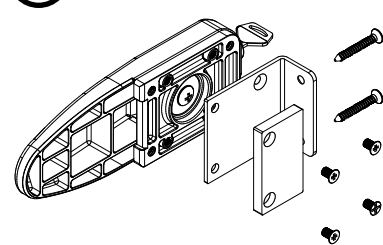


### Door frame mounted installation

For Motorhome or Caravan entrance door, garage door or hatches.




## 1.1 Surface mounted installation

1

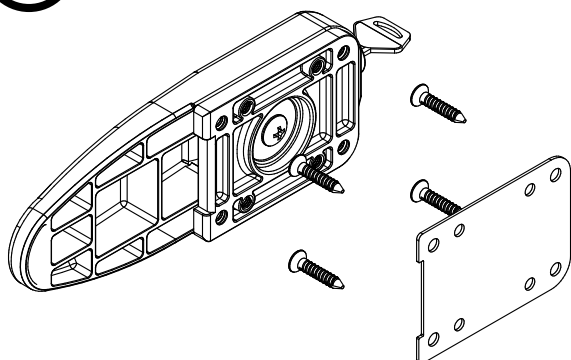


i




**Surface mounted installation \*** ( Read page 5 before mounting )  
For sliding door, cabin doors or double rear doors of a Van.


1

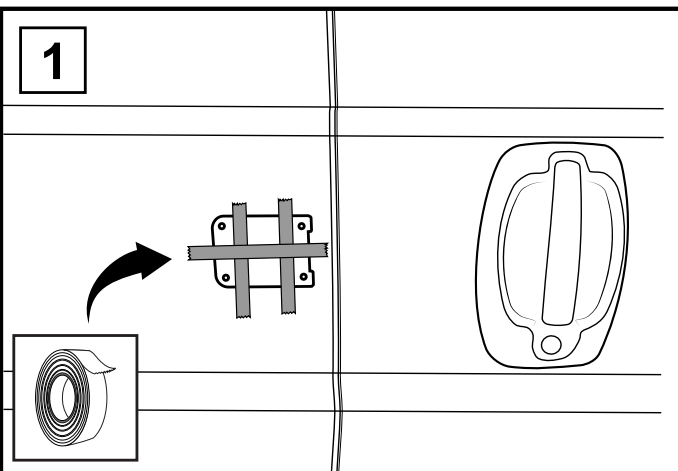


2

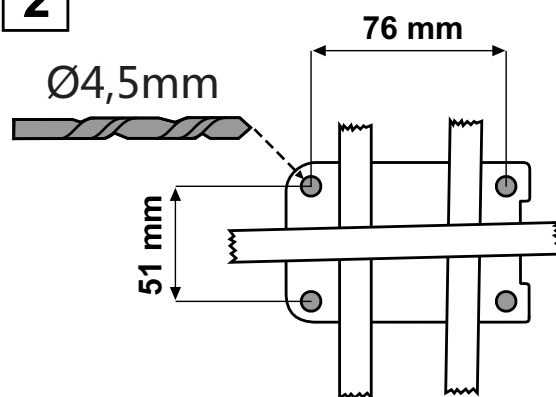


3

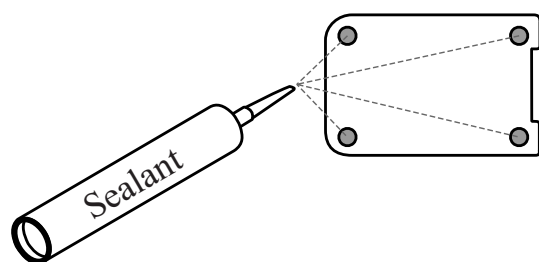


4

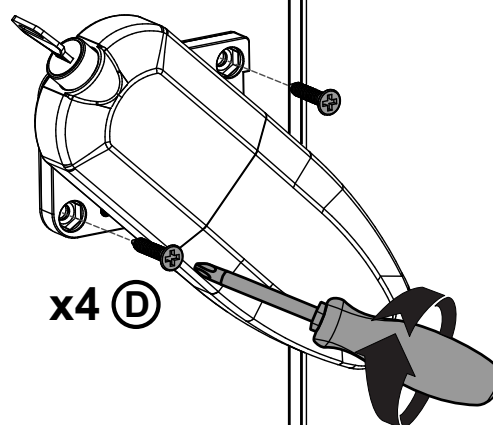

5

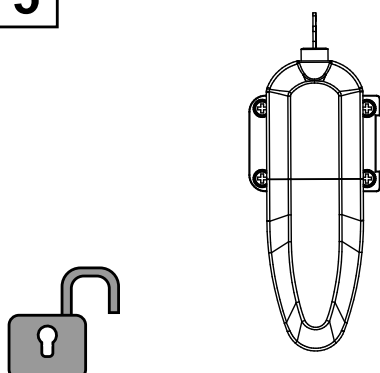

6

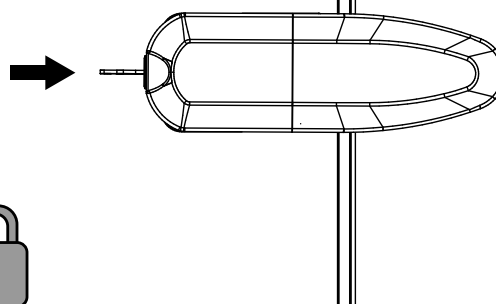




(\*) Warning sliding door



**i**


**Check before installation**

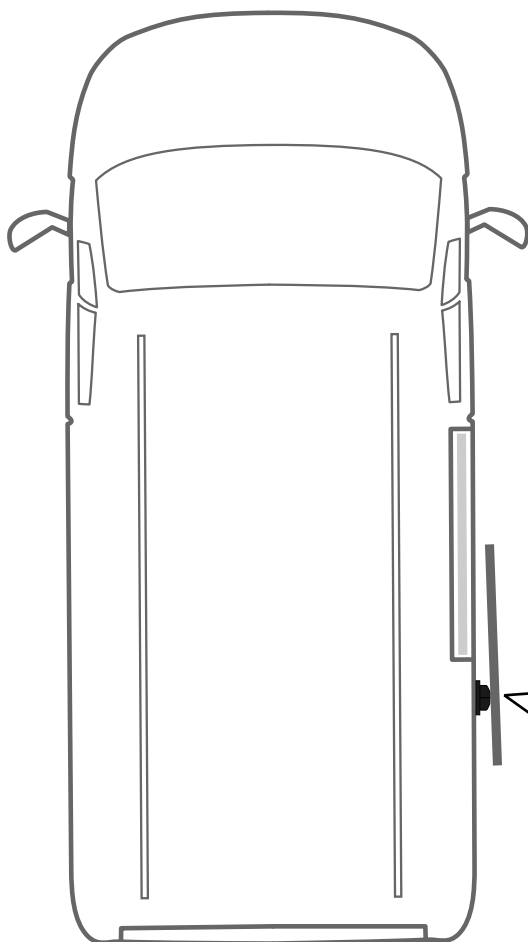

**i**

**In case of collision**

Solutions to avoid collision,  
look at page 6.

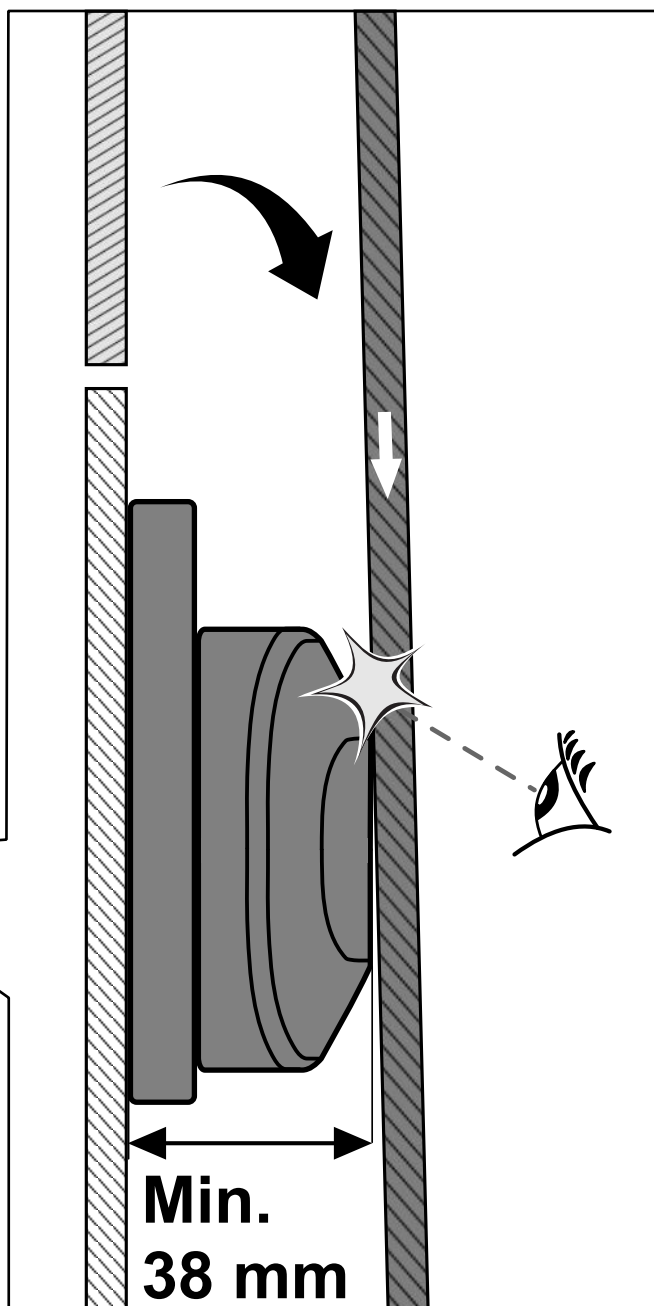






## Solutions to avoid collision

In order to avoid collision between the van door and the lock. Two options are given.

**A**

### Door stop

A door stopper can be mounted in the lower door rail. This can stop the door before collision appears between the door and the lock.

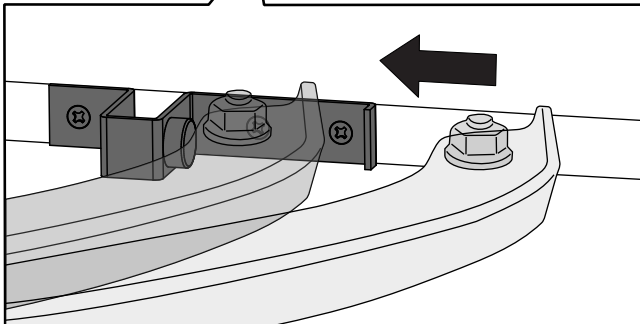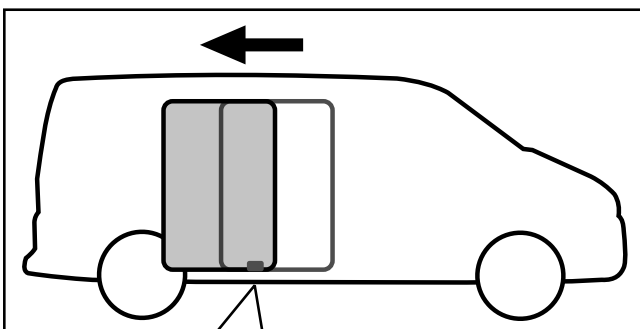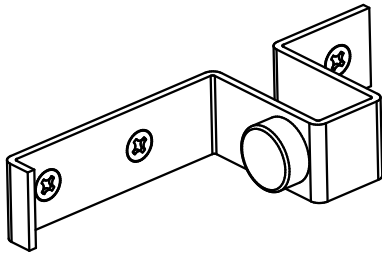

**B**


### Mounting place

The lock can be mounted higher on the surface. In general there is more place inbetween the door and the lock.



## 1.2 Wall mounted installation

2

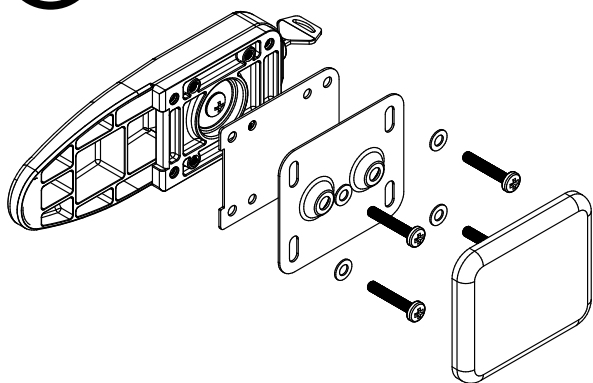


i




### Wall mounted installation

For Motorhome or Caravan entrance door, garage door or hatches.

1

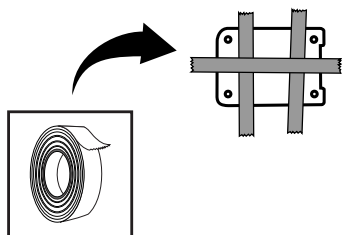


2

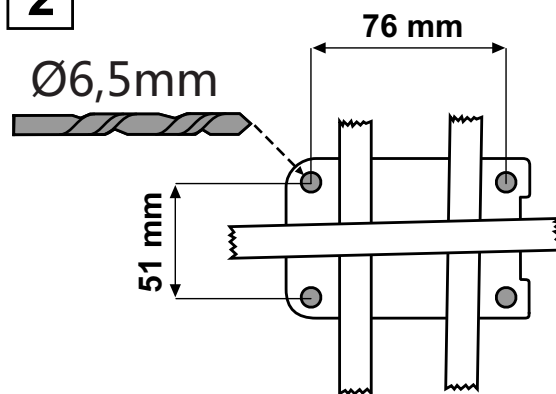

3


x4 ③

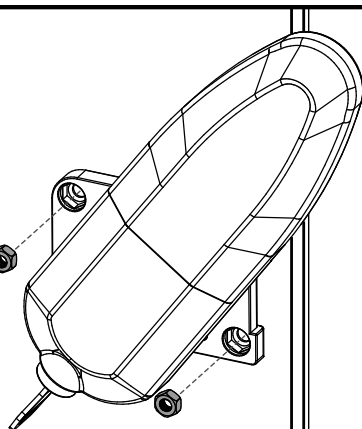


4

x4 ②


x4 ④

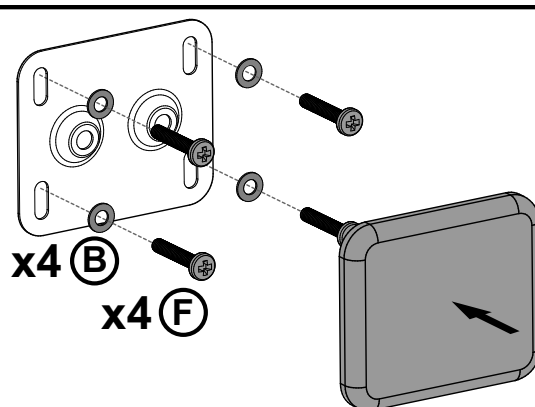

5

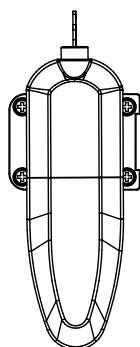


6

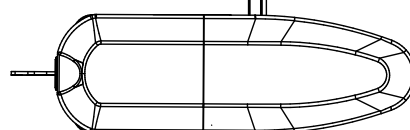


## 1.3 Door frame mounted installation

3

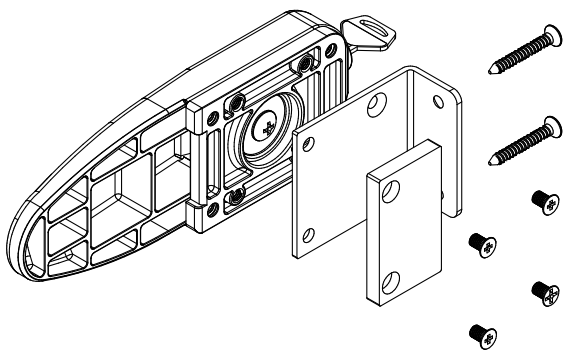


i



### Door frame mounted installation


For Motorhome or Caravan entrance door, garage door or hatches.

i

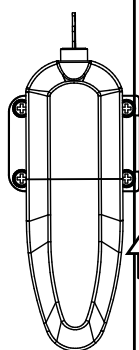


Min. 3mm

1

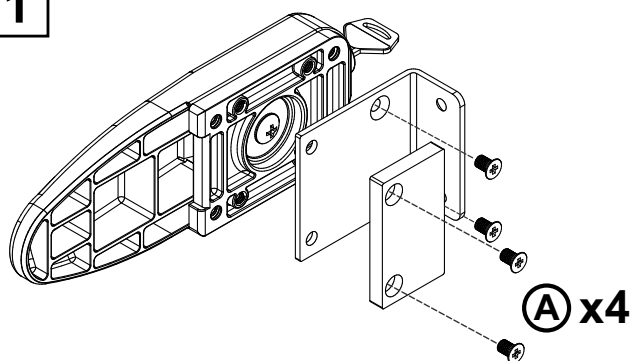


(A) x4

2

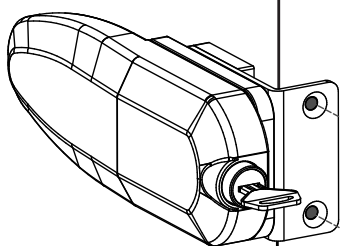


Ø4,5mm

3

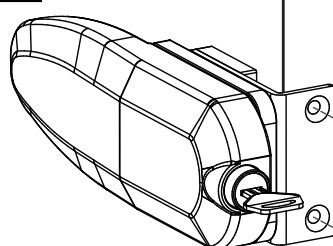

(E) x2

4

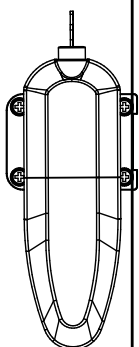

5

