


**Thule Transformation Kit
for Thule SmartClamp System
Ducato <2017**





> Instructions

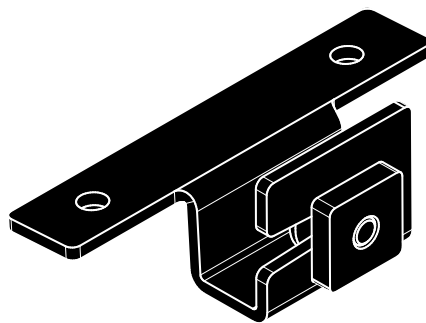

301646



ADR909-00 | 3380045300
20/03/2017

Bring your life
thule.com

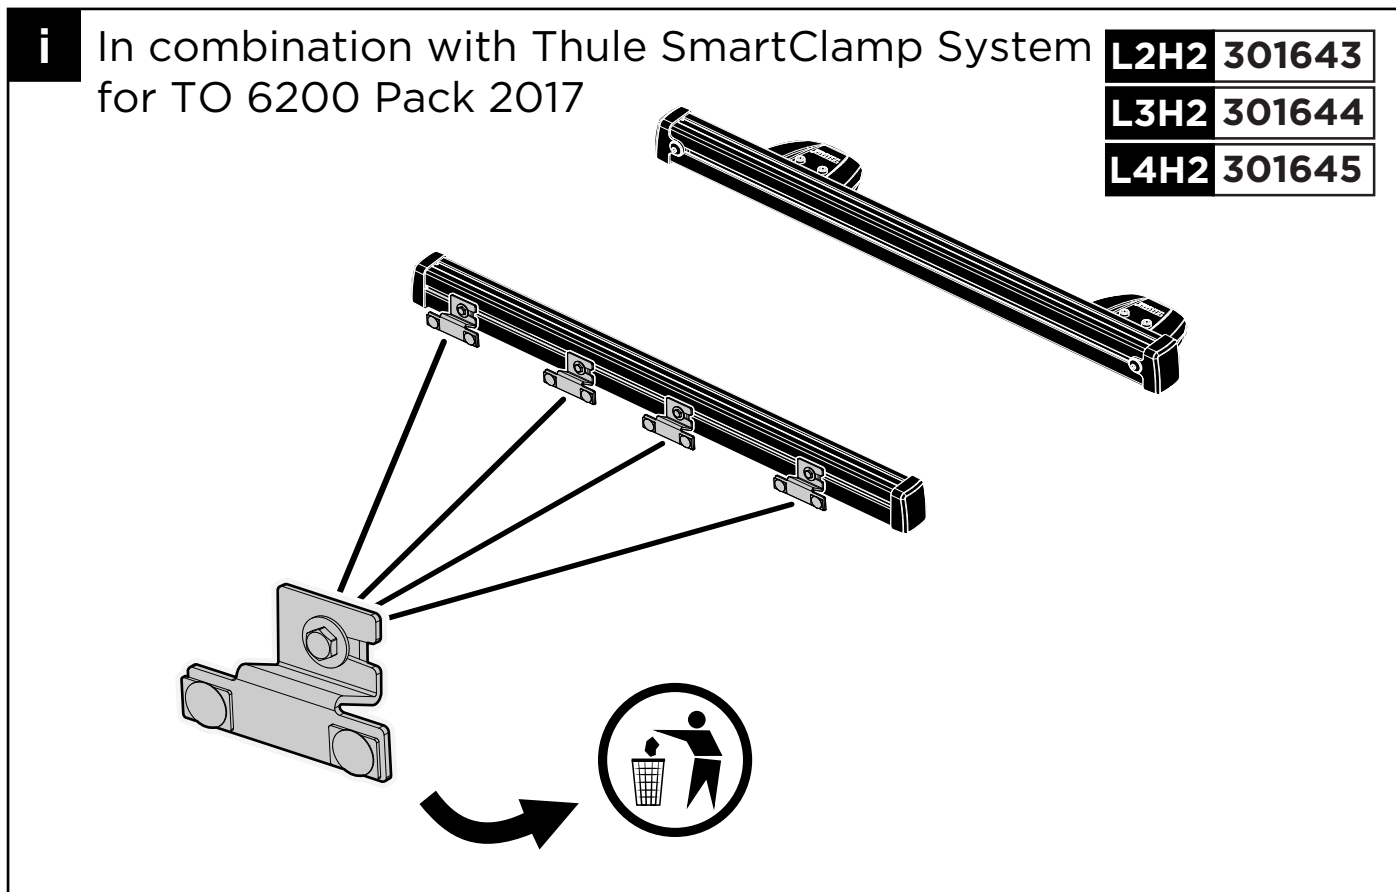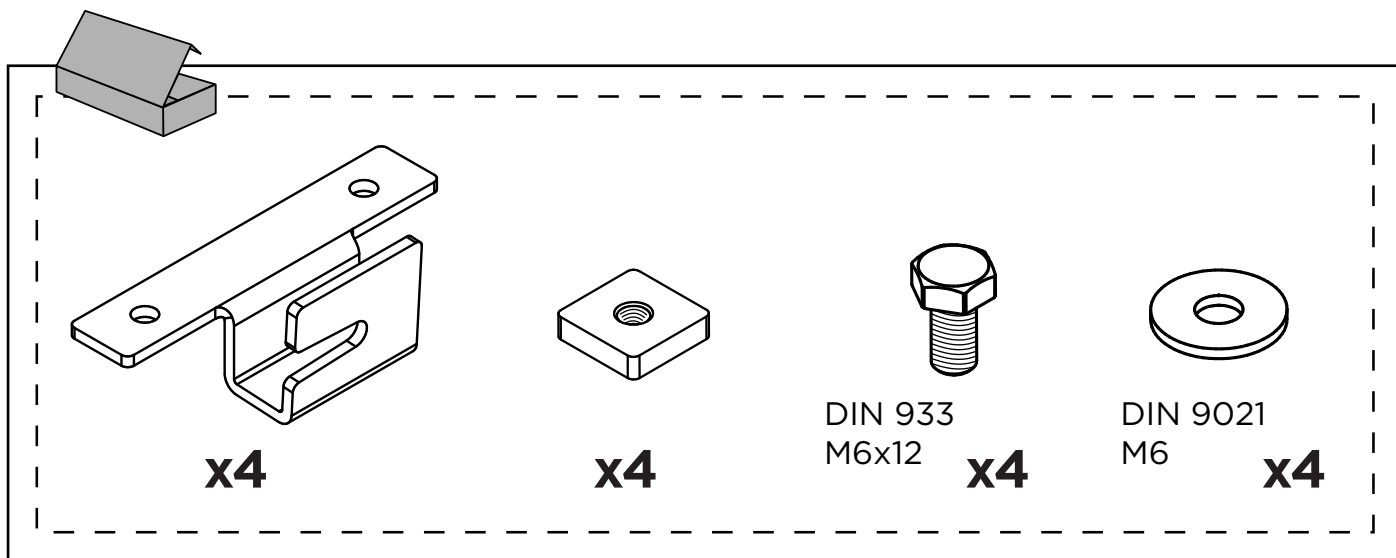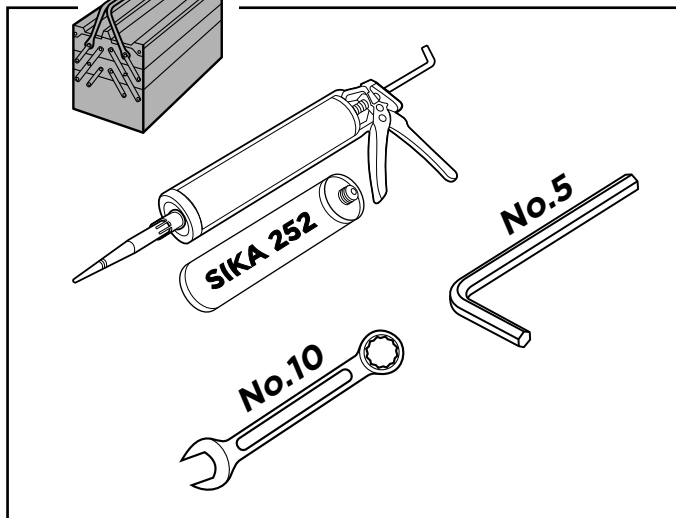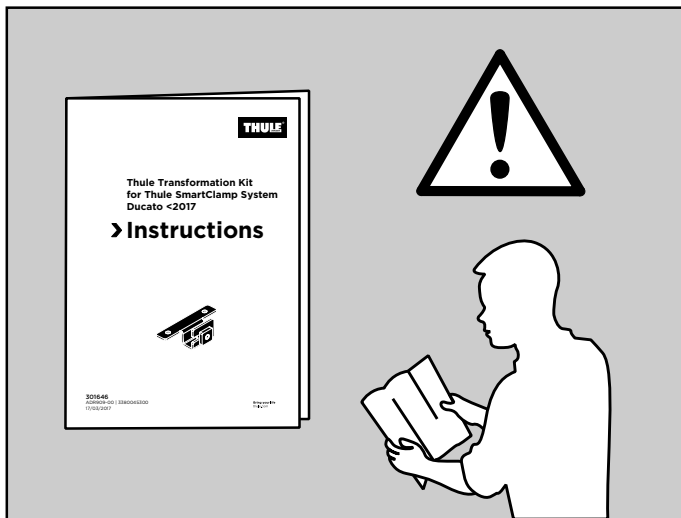




3

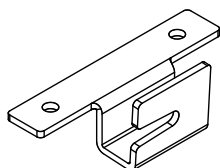
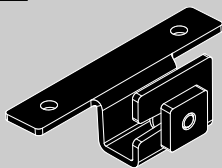


x4


A

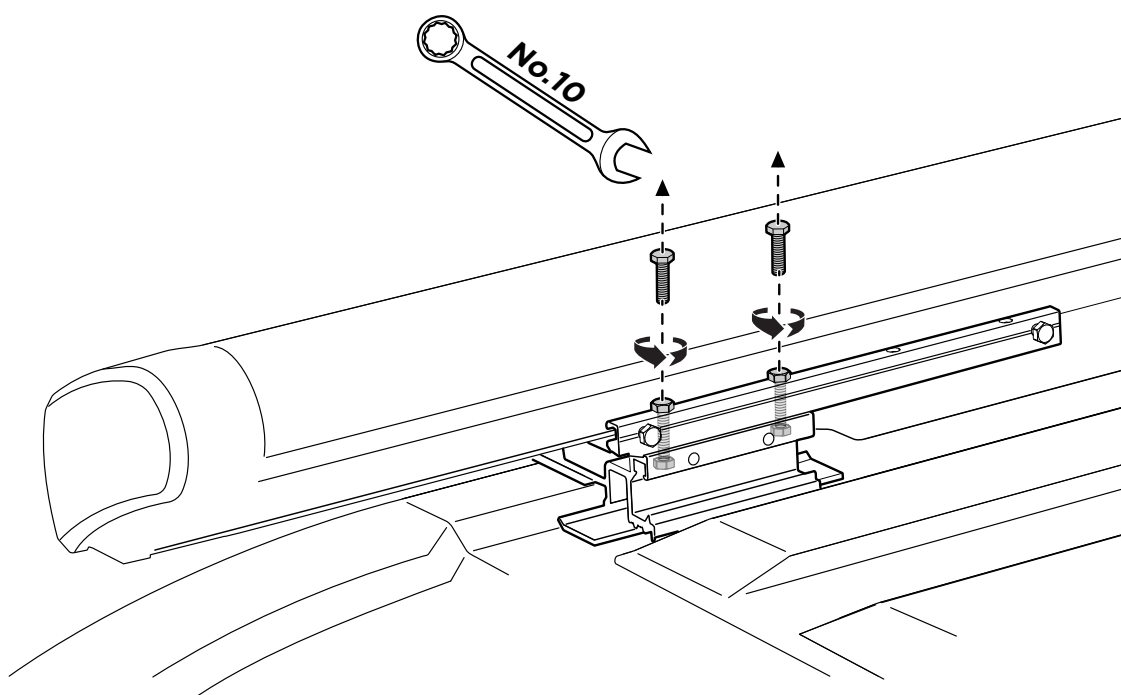


B

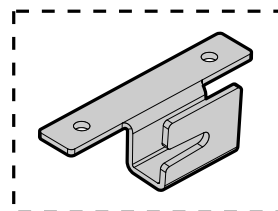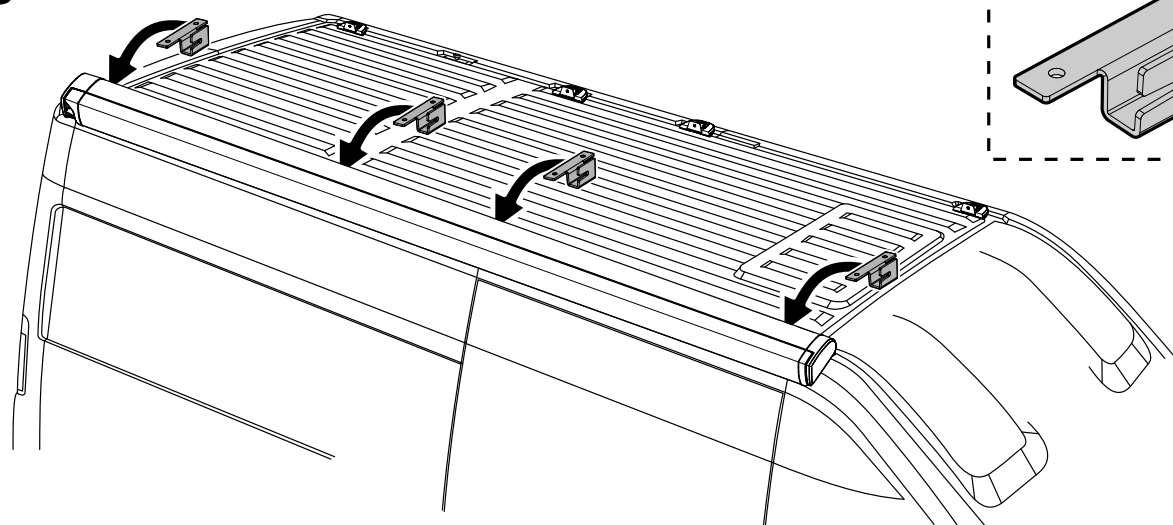

C

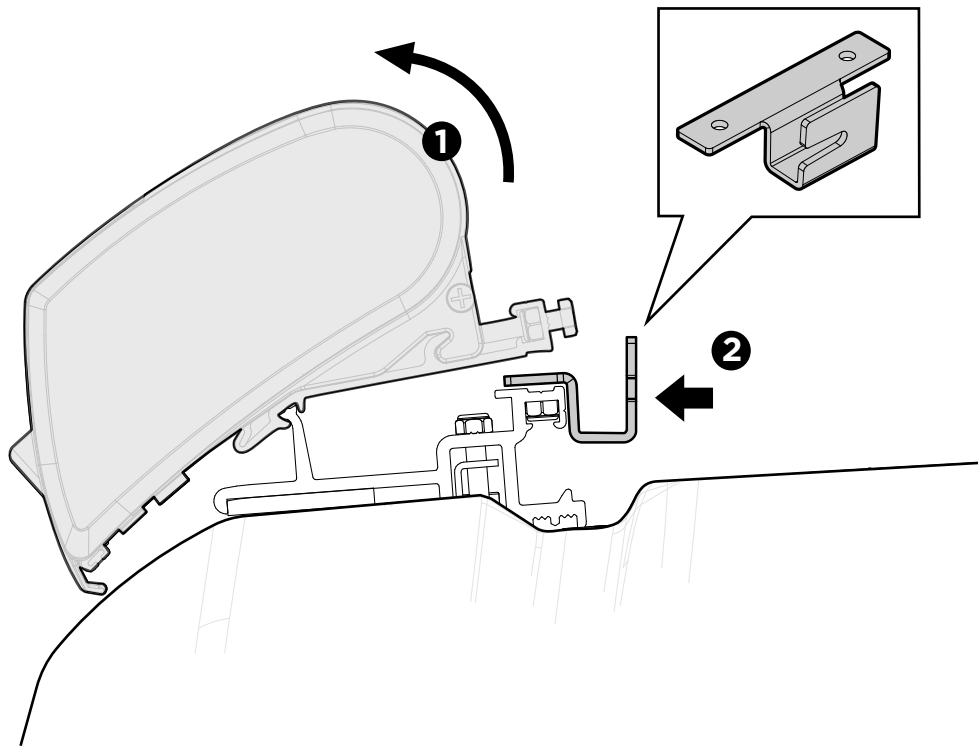


D

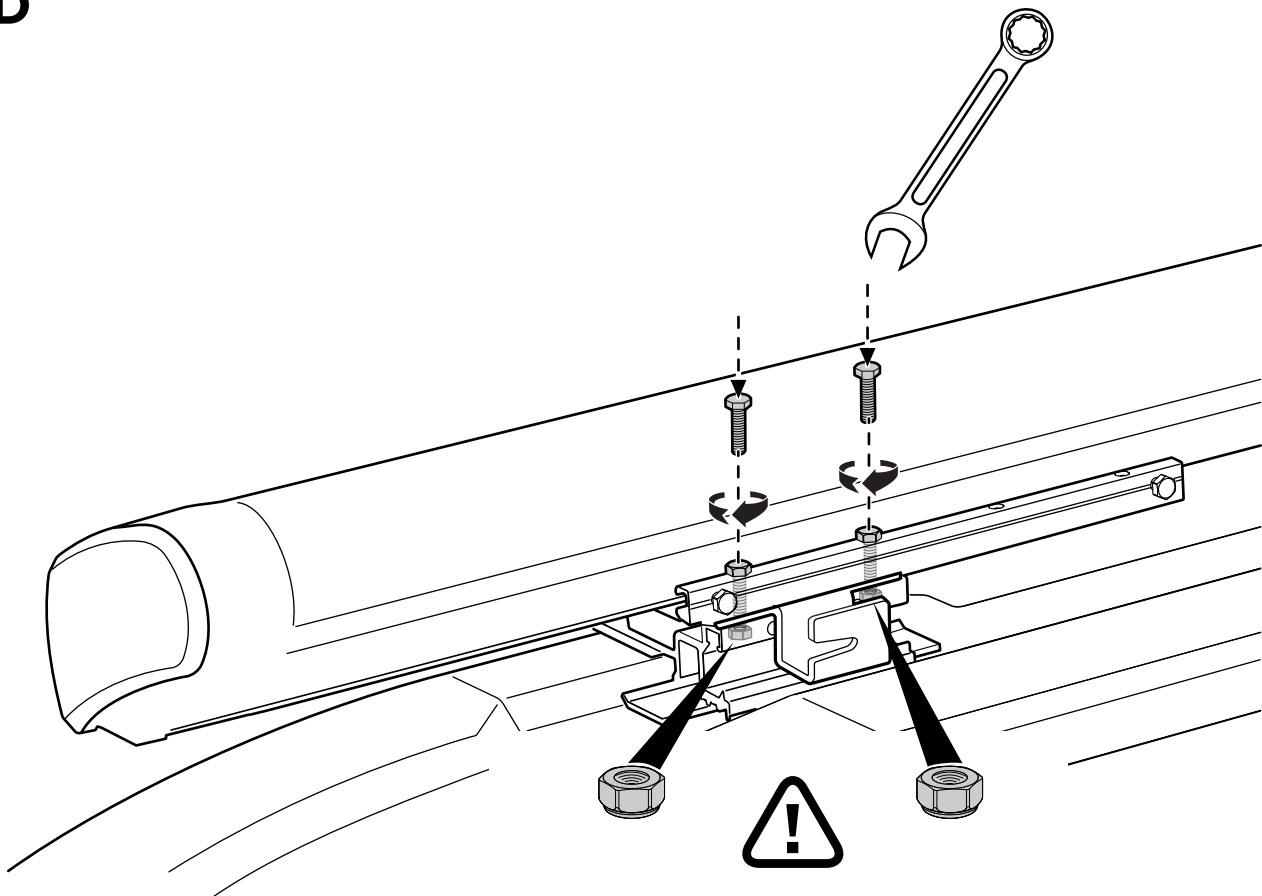


4


A

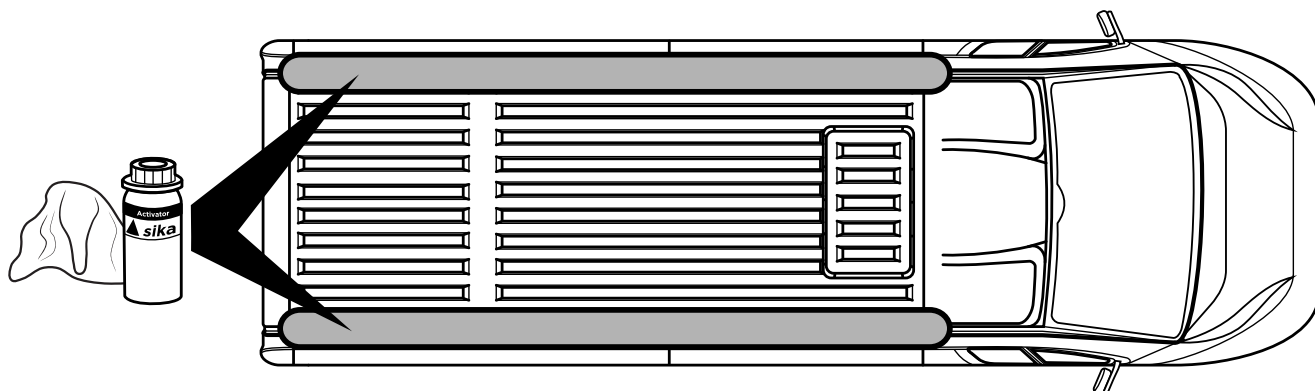

B

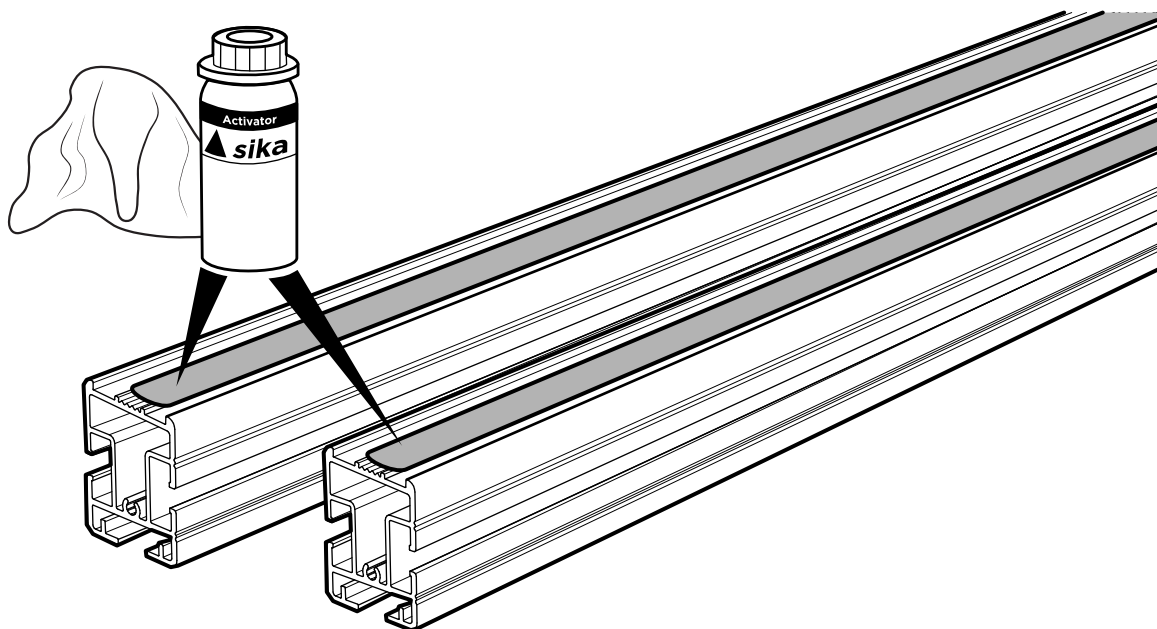

C

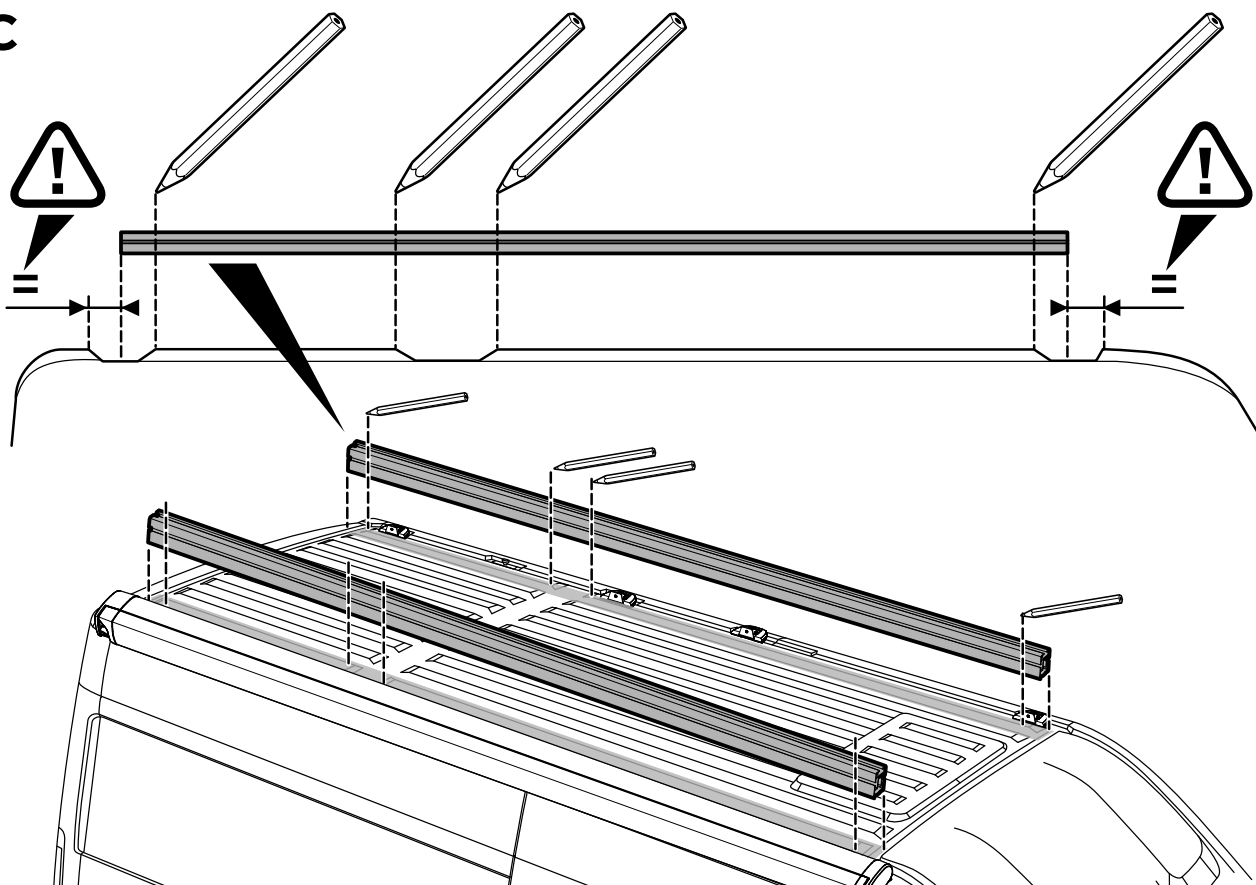




Glue / Lijmen / Verklebung / Coller:
 Thule recommends / beveelt aan / empfiehlt / recommande:
SIKA 252 or Terostat MS937

Preparation and sealing according to the prescripts of the glue supplier.
 Voorbehandeling en afdichting volgens de voorschriften van de lijmfabrikant.
 Primern und Abdichtung nach Anweisung des Dichtmittelherstellers.
 Procédure d'installation suivant les prescriptions indiquées sur l'emballage du produit.




48 h

D

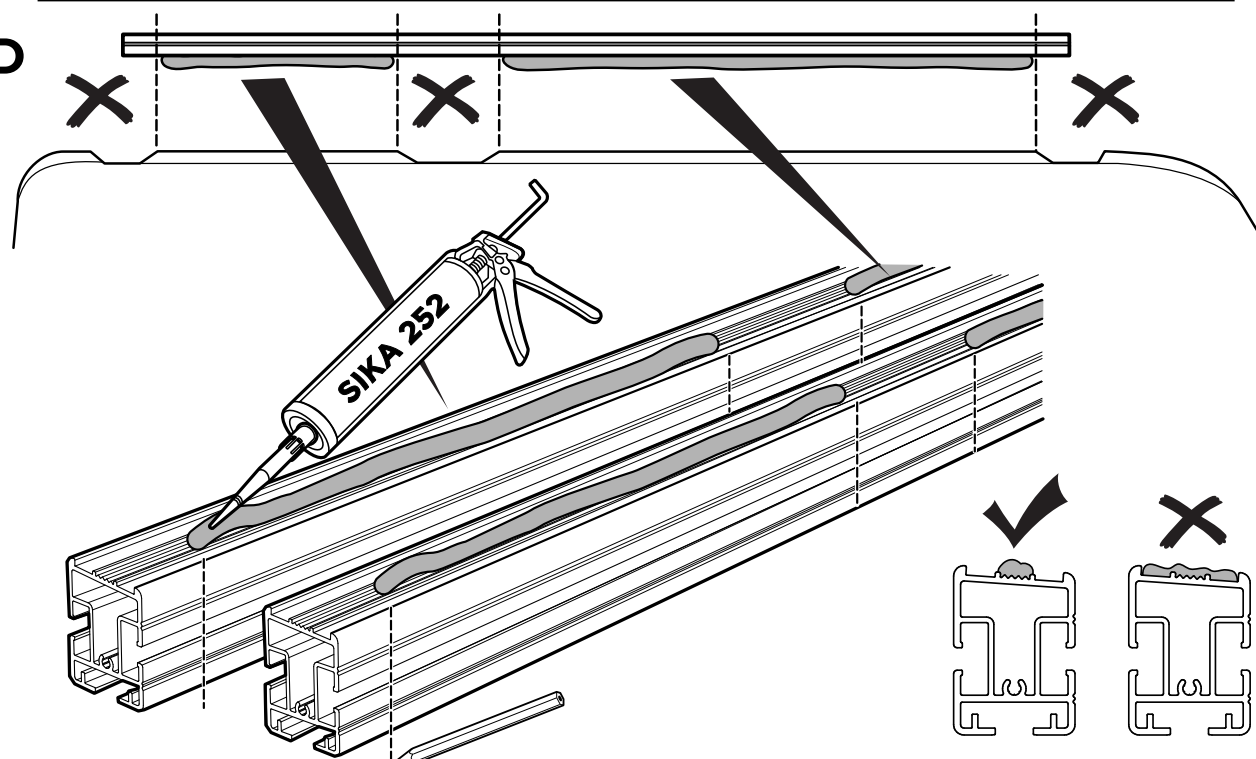


E

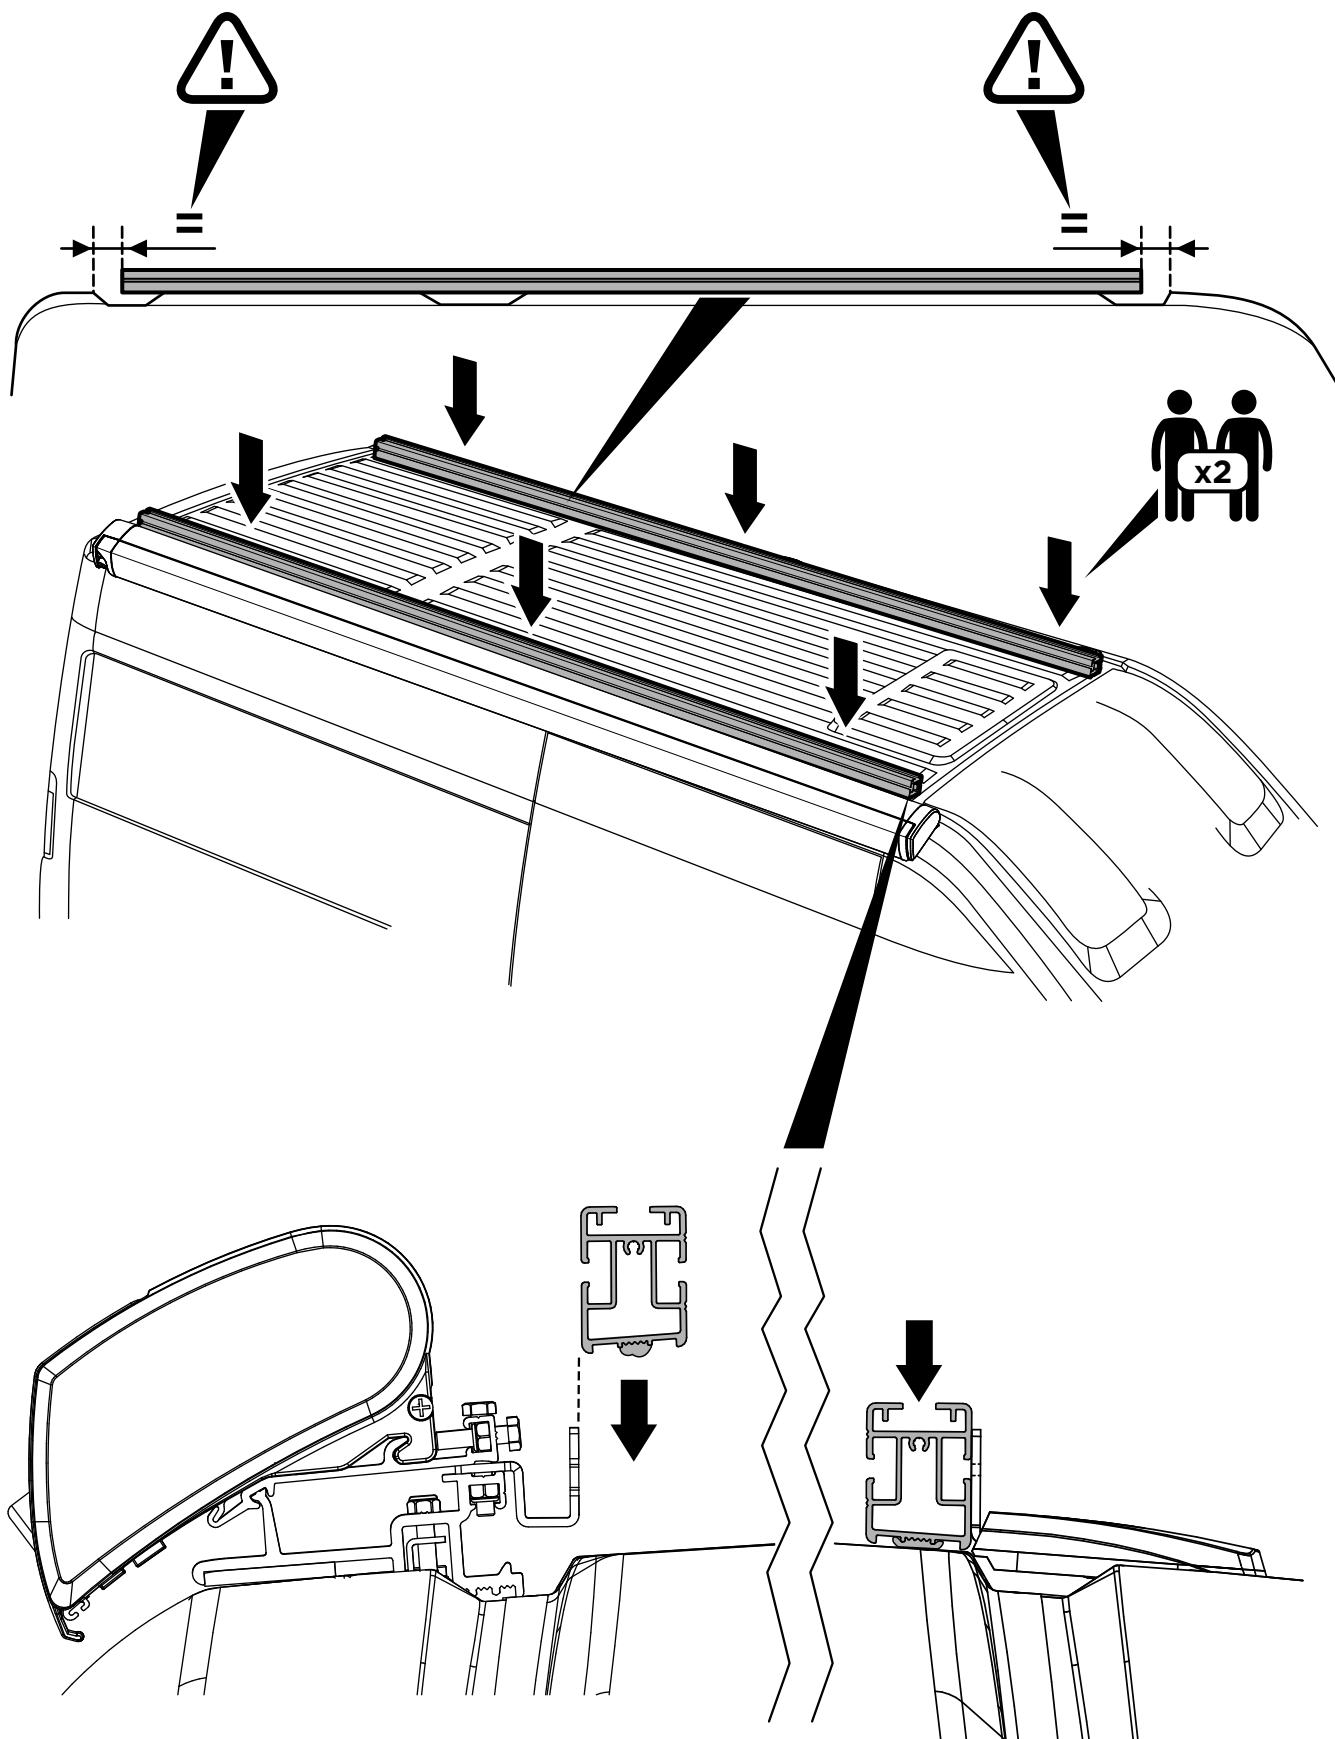

5


A

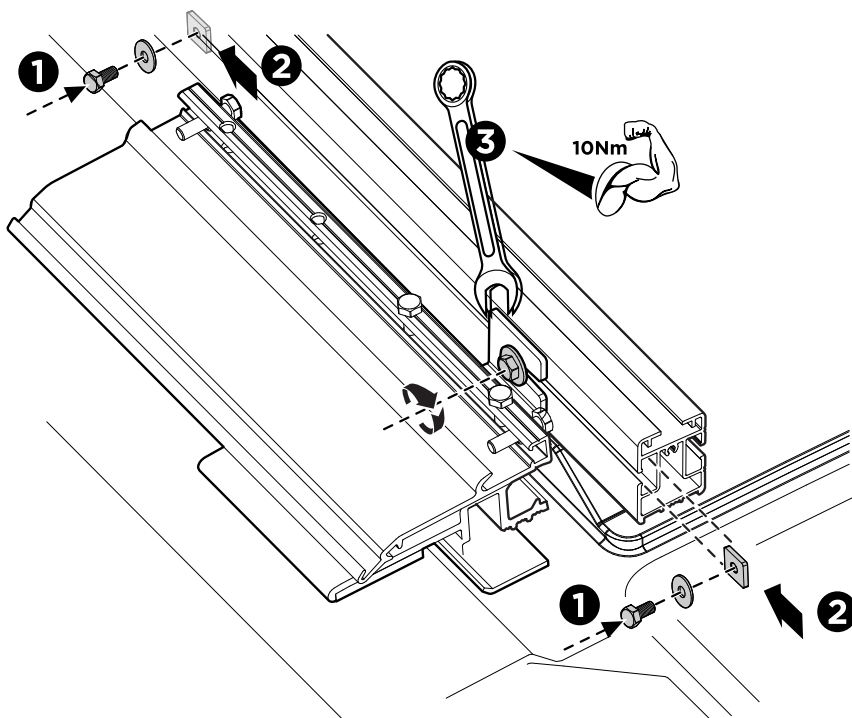

x4




x4



x4

B

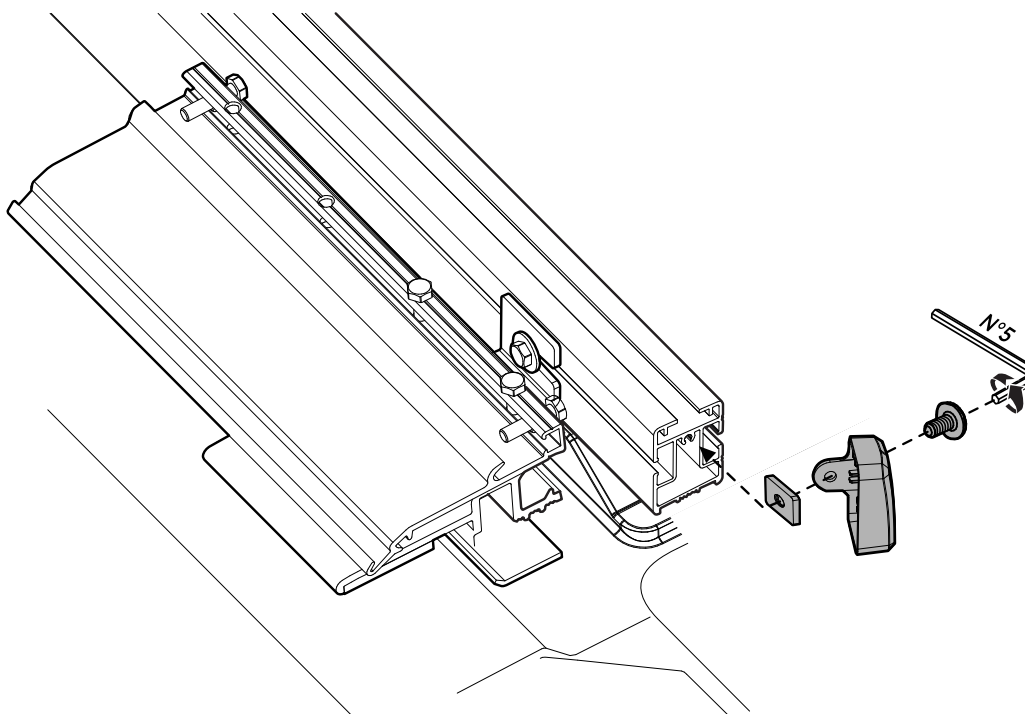

6

6B

